



Wizcom ReadingPen 2 - Quick Start Guide


Overview

The Wizcom ReadingPen 2 (ReadingPen) assists users with reading. The ReadingPen scans and reads aloud hard copy text. The ReadingPen also has a built in dictionary and thesaurus.


To Use

How it is Organized

The ReadingPen has the following parts.

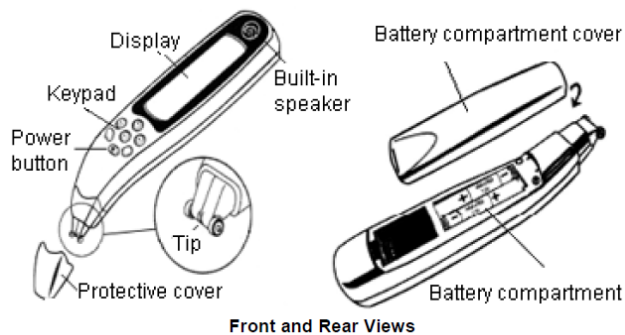

The keypad has seven keys that are used to control the ReadingPen functions.

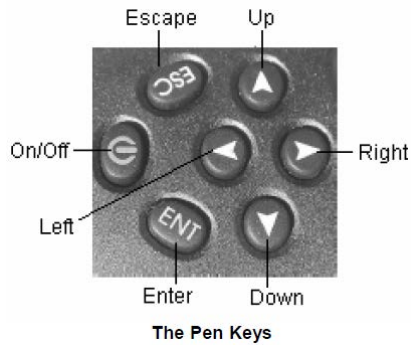


- Power Key: Use this key to turn the ReadingPen on and off.
- Enter Key (ENT Key): Use this key to confirm a selection. Press and hold the enter key to scan through menus quickly and activate the voice feature in the Dictionary Screen.
- Escape Key (ESC Key): Use this key to navigate to the previous menu, close a screen or cancel a selection.
- Arrow Keys (up, down, left, right): Use these arrows for scrolling.

Training for Beginners

The ReadingPen has a built in training session for new users. To access the training, press the **ENT Key** to access the **Main Menu**. Use down arrow to scroll through the menu until **View Training** is highlighted and then press the **ENT key**. Follow the directions on the ReadingPen screen to complete the tutorial.

How to Scan and Read

To scan text, hold the ReadingPen tip at a 90 degree angle to the paper. Position the scanning tip so that the text is between the two red scrolling wheels on the tip. Slowly scan your text, one line at a time. Scanning can be from left to right or right to left.

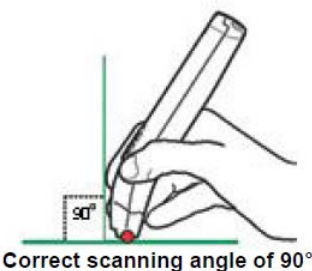

After scanning, the ReadingPen will read aloud the line of text. After scanning a line of text, the following functions are available:

- Left Arrow Key: Reads the entire line of text aloud again.

- Right Arrow Key: Reads the line of text aloud word by word.
- Down Arrow Key: Provides the dictionary definition of the highlighted word.
- ENT key: Changes the screen to Large-Type Screen. Only one word is shown on the Large-Type screen at a time and the functions of the keys changes when in Large-Screen mode, including:
 - Right Arrow Key: spell word aloud.
 - ENT Key: Speak entire word aloud.
 - Left Arrow Key: Divides the word into syllables. The Right Arrow Key returns you to the Large-Type Screen.
 - ESC Key: Exits Large-Screen Mode.

Common Settings

To access the following settings, press the **ENT Key** to access the **Main Menu**. Use the arrow keys to scroll through the menu until **Settings** is highlighted and then press the **ENT key**.

- Voice Settings: This option allows you to adjust the volume, turn auto speak on or off and adjust the reading speed.
- Lock Dictionary Access: This option allows you to lock Dictionary access by requiring a code to use the dictionary. This option may be used in testing situations where a dictionary is not allowed.
- Highlight Spoken Words: This option allows you to have words highlighted on the screen as they are read aloud or to turn the highlighting feature off.
- Word/Line Display First: This setting to choose having one word read aloud at a time or the entire line that is scanned.
- Set Right/Left Handed: The ReadingPen is set to right handed use by default. Use this option to switch for left handed use.
- Set Contrast: Use this feature to adjust the contrast of the display screen.

Program Manufacturer Contact Info

Wizcom Technologies, Inc
20 Haganan St.
Einav Industrial Park
Modiin
Tel.: +972-(0)73-2906131

Website <http://www.wizcomtech.com/eng/home/a/01/lang/index.asp>

Cost: \$229.95